

# ARMSTRONG® REMOTE

**POWER**  
Turns selected device "on/off"

**DEVICE SELECTORS**  
Switches between equipment

**HELP**  
Provides helpful information when pressed in various areas of the Interactive Guide

**GUIDE**  
See program listings for the current time

**ARROWS, PAGE + OR -**  
Use to navigate through the guide

Note: Arrows also control PVR  
Fast Forward, Slow FF from Pause ▶  
Rewind, Slow Rewind from Pause ◀  
Pause, Play ▲  
Go to Live TV ▼

**INFO**  
See program information

**VOLUME**  
Used to increase or decrease a program's volume

**TV/VCR, BYPASS**  
Reserved for Future Use

**PVR (VCR) CONTROLS**  
Controls PVR and VCR functions

**STOP, PAUSE, PLAY**  
Rewind, Record, Fast Forward



**MUTE**  
Turns sound "on/off"

**LOCK**  
Restrict viewing with Parental Controls

**EXIT**  
Return to watching television

**OK**  
Select a highlighted item; or, while watching a program, press to display or remove the Flip Bar

**MENU**  
Enter and exit the Main Menu

**LAST**  
Returns to the last channel viewed or last screen in Interactive Guide

**A, B AND C**  
Reserved for Future Use

**FAVORITE**  
Scans through selected favorite channels

**CHAN ▲ ▼**  
Change channels and accesses the Flip Bar


**MUSIC**  
See digital music channels listings

**NUMBERS**  
Press channel numbers, then OK or ENTER to tune to a channel


**DAY + AND -**  
See listings for the next or previous day in Interactive Guide

# QUICK START GUIDE

## Ordering VOD:

- Press the *VOD button* OR
- Press the *Settings/Menu button* and highlight the On Demand selection  on the on-screen menu and press *OK* or *Select*.
- Using the arrow keys on your remote, select a category. Then highlight a program or movie and press *OK/Select*.

## Music Choice:

- Press *Settings twice* to access Digital Music, highlight Digital Music selection  and press *OK* to access.
- Select a music channel by using the Arrow buttons.

## Control Live TV\*:

- Press *Pause* and the video on your screen instantly freezes; press *Play* to resume program.
- Press *Rewind* or *Fast Forward* up to 4 times to increase speed.
- Press *Pause* and then *Fast Forward* for *Slow Forward* motion or *Pause* and then *Rewind* for slow reverse motion.
- Press *Live* to return to your current programming.

## Recording\*:

- For One Touch Recording, Press *Record*. Recording begins immediately.
- To Record from Program Information, highlight the Action icon and press *OK*.
- To Schedule a Recording, select *DVR* from the Main Menu and select *Set a Recording*.
- To Record one program and watch another, press the *SWAP* button to switch tuners.

\*Must have a PVR to use recording functions.

Should your remote not work properly, please check the batteries before calling Armstrong®