

EXP REMOTE CONTROL



LEFT SIDE BUTTONS

RIGHT SIDE BUTTONS ON BACK

- 1 TIVO HOME** Takes you to the TiVo Home® screen, the starting point for all TiVo features and settings
- 2 TV PWR** If programmed, turns your TV on or off
- 3 INPUT** Selects the input your TV displays (such as DVD player, game system).
- 4 BACK** Goes back to the previous screen (in certain apps)
- 5 VOLUME AND MUTE** If programmed, control the volume on your TV or A/V receiver
- 6 VOICE** Voice command button. You say it, EXP finds it, you watch it!
- 7 GUIDE** Takes you to the program guide, where you can find shows to watch or record
- 8 PLAY** Starts playing a show from the My Shows list
- 9 REWIND** Rewinds a show. Press up to three times for three speeds
- 10 SLOW** Plays a show in slow motion
- 11 REPLAY** Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show.
- 12 THUMBS UP/DOWN** Rate shows, collections, or video providers for TiVo Suggestions.
- 13 A, B, C, D** Sort and filter views. Look for the on-screen tips
- 14 CLEAR** Removes display of info banner or program guide and deletes titles from My Shows or To Do list

Find tutorials and troubleshooting videos on **Channel 888** or visit ArmstrongOneWire.com/Support


ARMSTRONG®

EXP REMOTE CONTROL

RIGHT SIDE BUTTONS

LEFT SIDE BUTTONS ON FRONT

- 
- 15 **LIVE TV** Watch live TV, use it to cycle through the tuners
- 16 **INFO** Shows the info banner while watching Live TV. Press again to make it disappear
- 17 **OK/SELECT** Choose menu items. When watching Live TV, press to bring up the Mini Guide
- 18 **EXIT** Leave your current viewing
- 19 **ARROWS** Use these buttons to navigate the TiVo menus. In live TV, press **UP** for the on-line guide, **DOWN** to see personalized predictions, **LEFT** for favorite channels, and **RIGHT** to see what's on other tuners
- 20 **CHANNEL UP/DOWN** Change the channel and page up or down while in the program guide or TiVo menus
- 21 **RECORD** Starts recording the show you're watching, or sets up a recording for a show selected in the program guide.
- 22 **FAST-FORWARD** Fast-forwards through a show. Press up to three times for three speeds
- 23 **PAUSE** Freezes a show. Press again to resume playing
- 24 **ADVANCE** Moves forward in 30-second increments. Press and hold to jump to the end of the show. Press to jump to the next tick mark when fast-forwarding or rewinding
- 25 **ON DEMAND** Takes you to the main screen for video-on-demand options
- 26 **NETFLIX** Quick one-click access to Netflix
- 27 **ENTER/LAST** Returns to last channel viewed in Live TV
- Microphone

To program your remote, press the TiVo Home button  then press the left arrow button (#19) and select MENU (≡) > SETTINGS > REMOTE, CABLECARD & DEVICES > REMOTE CONTROL SETUP.

Follow the easy on-screen instructions.

For more EXP tips, go to Channel 888 or visit ArmstrongOneWire.com/support