


ARMSTRONG® REMOTE




QUICK START GUIDE

Ordering VOD:

- Press the *VOD button* OR
- Press the *Settings/Menu button* and highlight the On Demand selection  on the on-screen menu and press *OK* or *Select* OR
- Tune to Channel 1
- Using the arrow keys on your remote, select a category. Then highlight a program or movie and press *OK/Select*.

Music Choice:

- Press *Settings twice* to access Digital Music, highlight Digital Music selection  and press *OK* to access.
- Select a music channel by using the Arrow buttons.