



REMOTE CONTROL

TIVO Takes you to the TiVo Central® screen, the starting point for all TiVo features and settings.

TV PWR If programmed, turns your TV on or off.

INPUT Selects the input your TV displays (such as DVD player, game system).

BACK Goes back to the previous screen (in certain apps).

GUIDE Takes you to the program guide, where you can find shows to watch or record. Press again to see filtered views.

VOLUME AND MUTE If programmed, control the volume on your TV or A/V receiver.

THUMBS UP AND THUMBS DOWN Rate shows, collections, or video providers for TiVo Suggestions.

PLAY Starts playing a show from the My Shows list.

REWIND Rewinds a show. Press up to three times for three speeds.

REPLAY Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show.

A, B, C, D Sort and filter views. Look for the on-screen tips.

SLOW Plays a show in slow motion.

CLEAR Removes display of info banner or program guide and deletes titles from My Shows or To Do list.

LIVE TV Takes you to Live TV. If you're watching Live TV, use it to cycle through the tuners.

INFO Shows the info banner while watching Live TV. Press again to make it disappear.

SELECT Choose menu items. When watching Live TV, press to bring up the Mini Guide.

ZOOM Changes the aspect ratio of shows on your TV.

ARROWS Navigate TiVo menus and program guide.

CHANNEL UP/DOWN Change the channel and page up or down while in the program guide or TiVo menus.

RECORD Starts recording the show you're watching, or sets up a recording for a show selected in the program guide.


FAST-FORWARD Fast-forwards through a show. Press up to three times for three speeds.

PAUSE Freezes a show. Press again to resume playing.

ADVANCE Moves forward in 30-second increments. Press and hold to jump to the end of the show. Press to jump to the next tick mark when fast-forwarding or rewinding.

ON DEMAND Takes you to the main screen for video-on-demand options.

ENTER/LAST Returns to last channel viewed in Live TV.

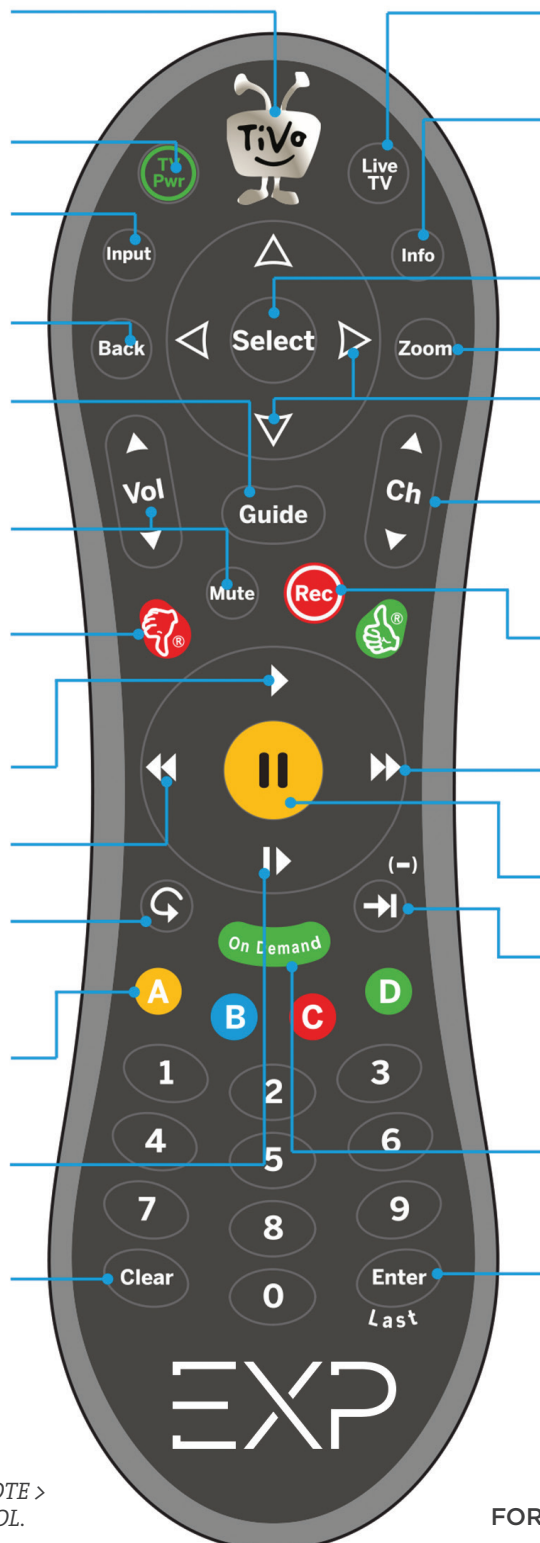

To program your remote, press the TiVo button to go to TiVo Central, then select **SETTINGS & MESSAGES > SETTINGS > REMOTE > CABLECARD & DEVICES > REMOTE CONTROL**. Follow the easy on-screen instructions.

FOR MORE REMOTE CONTROL TIPS, VISIT ARMSTRONGNEWIRE.COM/EXP