

**TIVO** Takes you to the TiVo Central® screen, the starting point for all TiVo features and settings.

**TV PWR** If programmed, turns your TV on or off.

**INPUT** Selects the input your TV displays (such as DVD player, game system).

**BACK** Goes back to the previous screen (in certain apps).

**SEARCH BUTTON** Search for TV shows, movies, actors, directors or channels by entering the first few letters of a title, episode, subject, or name.

**VOLUME AND MUTE** If programmed, control the volume on your TV or A/V receiver.

**GUIDE** Takes you to the program guide, where you can find shows to watch or record.

**PLAY** Starts playing a show from the My Shows list.

**REWIND** Rewinds a show. Press up to three times for three speeds.

**REPLAY** Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show.

**THUMBS UP AND THUMBS DOWN** Rate shows, collections, or video providers for TiVo Suggestions.

**A, B, C, D** Sort and filter views. Look for the on-screen tips.

**SLOW** Plays a show in slow motion.

**CLEAR** Removes display of info banner or program guide and deletes titles from My Shows or To Do list.

**LIVE TV** Watch live TV, use it to cycle through the tuners.

**INFO** Shows the info banner while watching Live TV. Press again to make it disappear.

**SELECT** Choose menu items. When watching Live TV, press to bring up the Mini Guide.

**EXIT** Leave your current viewing.

**ARROWS** Navigate TiVo menus and program guide.

**CHANNEL UP/DOWN** Change the channel and page up or down while in the program guide or TiVo menus.

**RECORD** Starts recording the show you're watching, or sets up a recording for a show selected in the program guide.

**FAST-FORWARD** Fast-forwards through a show. Press up to three times for three speeds.

**PAUSE** Freezes a show. Press again to resume playing.

**ADVANCE** Moves forward in 30-second increments. Press and hold to jump to the end of the show. Press to jump to the next tick mark when fast-forwarding or rewinding.

**ON DEMAND** Takes you to the main screen for video-on-demand options.

**NETFLIX BUTTON** Quick one-click access to Netflix.

**ENTER/LAST** Returns to last channel viewed in Live TV.

To program your remote, press the TiVo button to go to TiVo Home, then select MENU > SETTINGS > REMOTE, CABLECARD & DEVICES > REMOTE CONTROL SETUP.

Follow the easy on screen instructions.

FOR MORE REMOTE CONTROL TIPS, VISIT [ArmstrongOneWire.com/EXP](http://ArmstrongOneWire.com/EXP)