 



ARMSTRONG® REMOTE

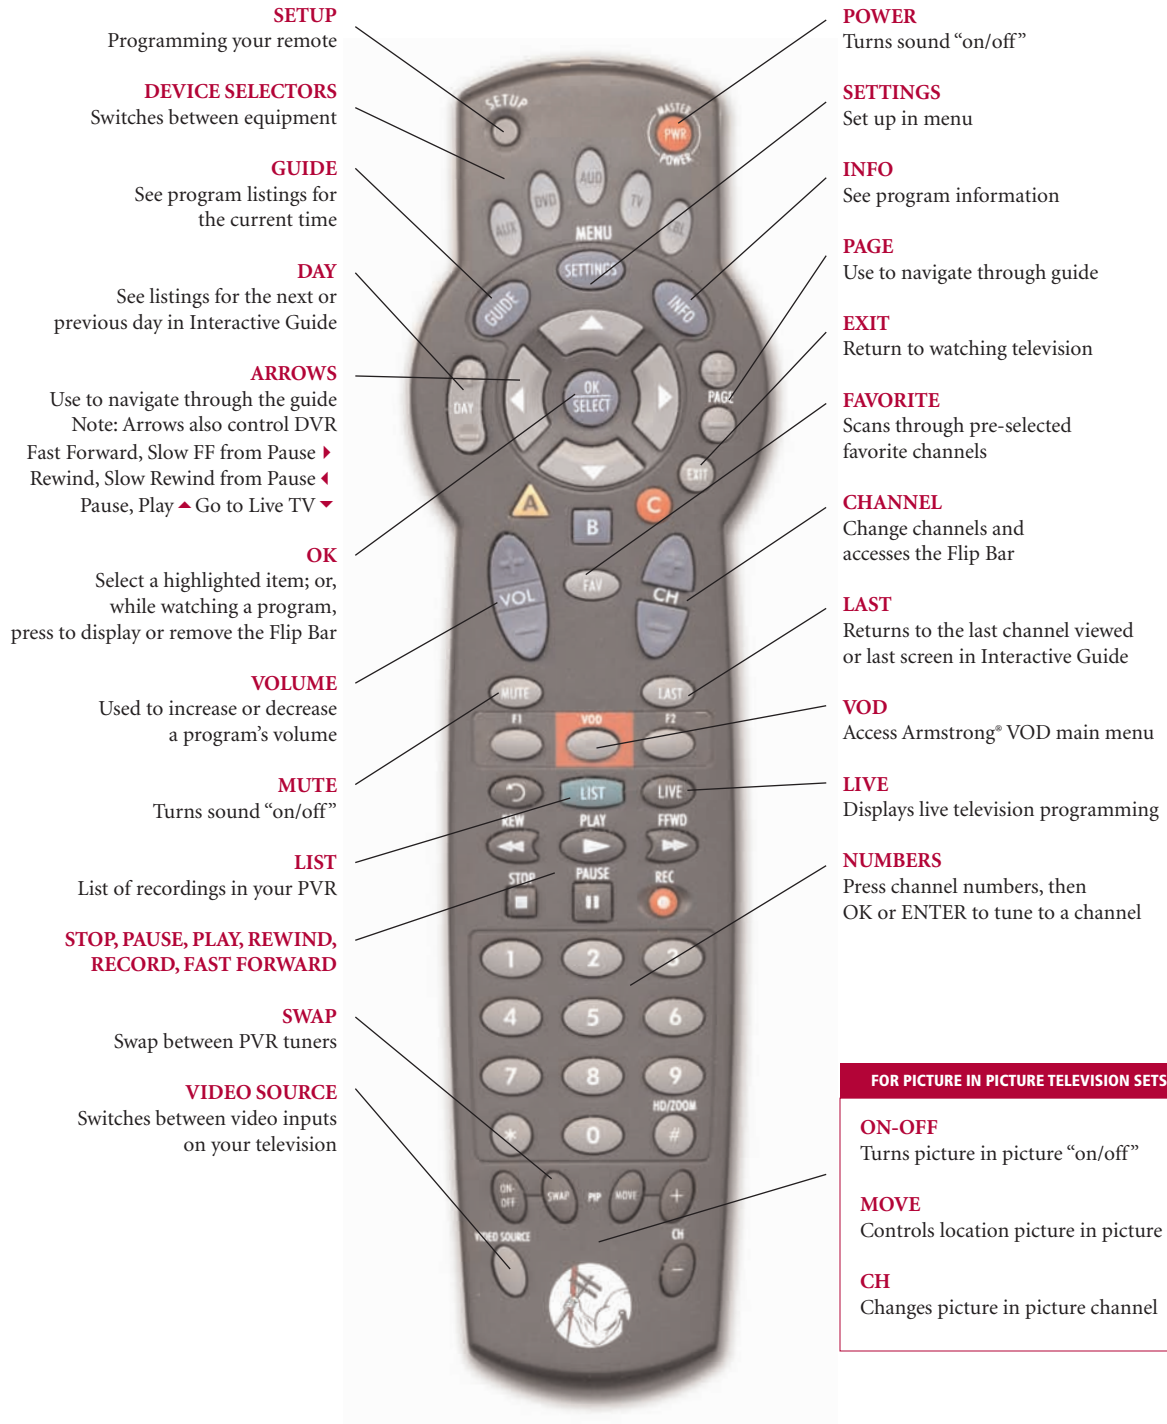


QUICK START GUIDE

Ordering VOD:

- Press the *VOD button* OR
- Press the *Settings/Menu button* and highlight the On Demand selection  on the on-screen menu and press *OK* or *Select*.
- Using the arrow keys on your remote, select a category. Then highlight a program or movie and press *OK/Select*.

Music Choice:

- Press *Settings twice* to access Digital Music, highlight Digital Music selection  and press *OK* to access.
- Select a music channel by using the Arrow buttons.

Control Live TV*:

- Press *Pause* and the video on your screen instantly freezes; press *Play* to resume program.
- Press *Rewind* or *Fast Forward* up to 4 times to increase speed.
- Press *Pause* and then *Fast Forward* for *Slow Forward* motion or *Pause* and then *Rewind* for slow reverse motion.
- Press *Live* to return to your current programming.

Recording*:

- For One Touch Recording, Press *Record*. Recording begins immediately.
- To Record from Program Information, highlight the Action icon and press *OK*.
- To Schedule a Recording, select *DVR* from the Main Menu and select *Set a Recording*.
- To Record one program and watch another, press the *SWAP* button to switch tuners.

*Must have a PVR to use recording functions.

Should your remote not work properly, please check the batteries before calling Armstrong®