

USING YOUR REMOTE CONTROL

Find programs with just a few taps of the remote control. Use these quick tips to enjoy full access to your guide.

1 GUIDE

Displays TV Listing Grid.

2 EXIT

Exits guide and returns to full screen live TV.

3 NAVIGATION BUTTONS

Navigate or browse LEFT, UP, RIGHT, DOWN.

4 OK/ENTER

In TV Listings Grid: Selecting OK/Enter on a program currently airing will tune to that channel for immediate viewing.

In Parental Controls and General Setup: Activates or toggles a setting.



5 LAST

Returns you to the last screen or channel.

6 PAGE UP (+)/DOWN (-)

In the TV Listings Grid, scrolls UP and DOWN full screen (7 channels at a time).

7 MENU

Displays Parental Controls and General Setup

8 CHANNEL UP (+)/DOWN (-)

Changes the channel while displaying the On Now/On Next Banner.

9 INFO

Press 1x to Access the On Now/On Next Banner

Press 2x to Display the TV Listings Grid

Press 3x to Display the Program Information Screen

10 SETUP

Displays Parental Controls and General Setup.

* Remotes may vary.

NA-DTA-SD-NNR-2014

PARENTAL CONTROLS

Set viewing restrictions by channel and rating. Locked programs cannot be viewed until the assigned PIN is entered.

Setting Up Your PIN

- 1 Press **MENU** on the Remote Control.
- 2 **Parental Control** will be the default.
- 3 Press **OK/ENTER**. A pop-up menu will appear asking for initial PIN set-up.
- 4 Enter a 4 digit PIN of your choice.
- 5 The system will prompt you to confirm your PIN again. Once confirmed, the option should now read **Set**.



Locking By Ratings And Channels

- 1 Press **MENU** on the Remote Control.
- 2 **Parental Control** will be the default.
- 3 Press **Right Arrow** to highlight the second column.
- 4 Enter the 4 digit PIN.
- 5 Press **Down** to highlight **Channels**, **Movie Ratings** or **TV Ratings**. The third column will populate with a rating or channel list. A lock or unlock icon will appear next to each.
- 6 Press **Right Arrow** to access the third column.
- 7 Use the **Up** and **Down** arrows to navigate the list.
- 8 Highlight the desired channel or rating and press **OK/ENTER** to initiate the lock. The lock icon will appear.
- 9 If the lock is already set, you can press **OK/ENTER** to unlock. The icon will change to unlocked for ratings, or be removed for channels.

Copyright © 2014 Rovi Corporation. All rights reserved. Rovi and the Rovi logo are trademarks of Rovi Corporation and/or its subsidiaries.



ARMSTRONG®

HD Digital Adapter On Screen Guide

Quick Reference

For more info visit:
ArmstrongOneWire.com/DAGuide

WELCOME TO OUR DA GUIDE

Find what to watch quickly and explore programming right from your existing remote control! Press INFO to get instant information on what you are watching and move onto other screens using the guide's intuitive browsing experience.

ON NOW/ON NEXT BANNER

Get instant information on what's currently playing and what's coming up next.

Accessing What's ON NOW

- Change **CHANNELS +/-** keys while watching TV, or
- Press **INFO** while watching TV



See What's ON NEXT

- Press the **Right Arrow** button to see what's 'On Next'
- **ON NEXT** will become highlighted in Orange
- Press **Left Arrow** to return to what's 'On Now'

Browsing other Channels

- 1 To browse programming on other channels use the **Up** and **Down** arrows. The On Now/On Next Banner will display information for that channel.
- 2 Use the **Left** and **Right** arrows to toggle between what's 'On Now' and what's 'On Next.'
- 3 To tune to a program airing now, press **OK/MENU**.
- 4 Press **GUIDE** button for the TV Listings Grid
- 5 Press **MENU** button to access the Settings Menu.

THE TV LISTINGS GRID

Access seven channels of TV listings at a time, with a 90 minute view of each. Browse multiple hours of continuous program information.

Accessing the TV Listings Grid

- Press **INFO** from the On Now/On Next Banner



Program Types and Colors

- **Orange** – Active Selection
- **Magenta** – Kids
- **Blue** – General Programs
- **Purple** – Movies
- **Green** – Sports

Browsing the TV Listings Grid

- 1 Access the TV Listings Grid by pressing **GUIDE** or **INFO** from the On Now/On Next Banner.
- 2 Use the **Arrow** buttons to move up, down, left & right through the grid one program or channel at a time. Use the **OK/ENTER** button to confirm a selection.
- 3 Use the **PAGE** keys to page up and down through the guide (seven channels at a time).
- 4 Highlight a program and quick info will display in the upper left hand corner of the screen.
- 5 Press the **INFO** button to display the Program Information Screen.

Tuning From the TV Listings Grid

Highlight a program airing now and simply press **OK/MENU** on the remote control to tune to that channel.

PROGRAM INFORMATION SCREEN

Get in-depth information on TV shows, movies, sports events and more.

Accessing the Program Information Screen

- Press **INFO** from the TV Listings Grid



Options

- Press **LAST** to return to the TV Listings Grid
- Press **5** to access Parental Control