

Programming Your Remote.

Your remote control is already programmed to control your Digital Adapter. To use it to also control your TV set, follow the easy-to-use instructions in the User's Guide, provided with each remote.



ARMSTRONG®
ONE WIRE. INFINITE POSSIBILITIES.

Your HD Digital Adapter is here. Turn it on.




Box Contents



*Digital Adapter



HDMI Cable

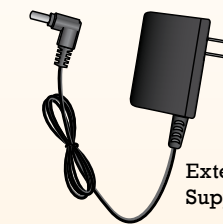


External 5V Power
Supply Unit

AA Batteries
(For your remote control)



Remote Control

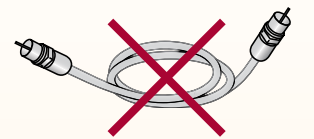

Coaxial RF Cable
(Not needed with HD Install)




Adhesive Fasteners
Note: We are not responsible for
any damage that might be caused
by using the adhesive fasteners.


*Your Digital Adapter may differ slightly from the image shown.

Connecting your new HD Digital Adapter.

1. Turn off your TV and disconnect the incoming cable from your TV.

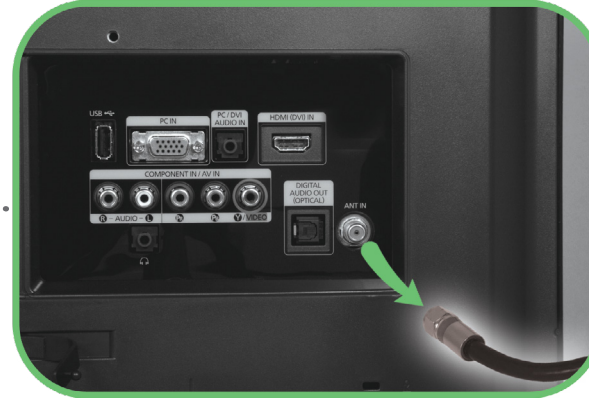


2. Connect the cable to your new DA.

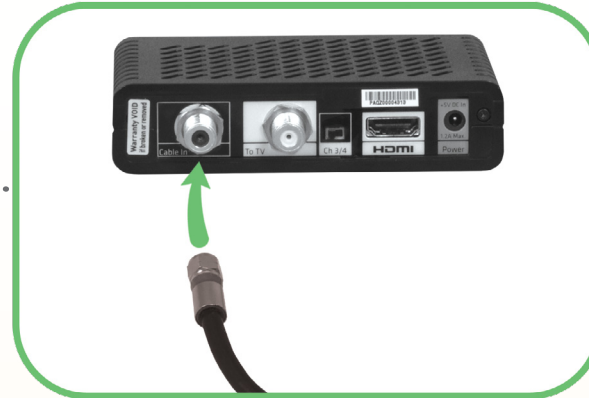

3. Connect the HDMI cable to your new DA.



4. Connect the HDMI cable to your TV.

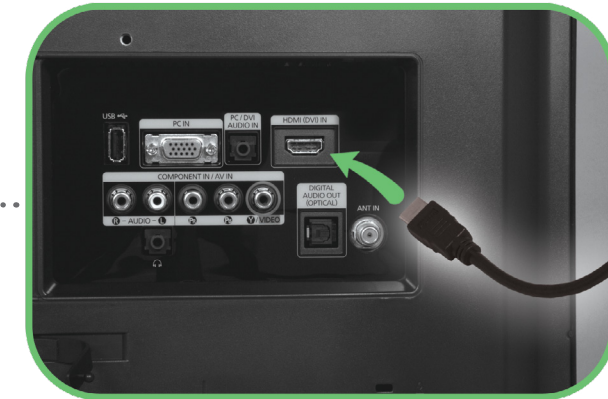

5. Connect the power supply cord to your new DA and plug it into your wall outlet.



6. You're now ready to activate your DA!

- Turn on your TV. Using your TV's remote, push the **input** button and select **HDMI**.
- Messages will be displayed on the screen. Once you see them, you'll know you have correctly connected your DA.

If you are installing multiple DAs, please connect ALL of them before proceeding with the next step.

- Go online to ArmstrongOneWire.com/Activate or call **1.855.511.0158** to activate your DA(s).