

RIGHT SIDE BUTTONS
LEFT SIDE BUTTONS ON FRONT

- 7 Use **INPUT** to change your video source (EXP box, DVD player, etc.)
- 8 **GUIDE** takes you to the on-screen program guide
- 9 Use **CHANNEL UP/DOWN** to change the channel or move quickly through lists and the guide
- 10 “**i**” (**INFO**) brings up the full Info banner while watching a show, and opens an Info card when pressed on a tile in the SmartBar and What to Watch
- 11 Use **EXIT** to close certain apps
- 12 Press and release the **GOOGLE ASSISTANT**® to issue voice commands
- 13 Press the **GRID** button to jump to the Apps and Games screen
- 14 Press the **NETFLIX** button to launch Netflix
- 15 Use the **NUMBER BUTTONS** to directly enter channel numbers



Activity Light

LEFT SIDE BUTTONS
RIGHT SIDE BUTTONS ON BACK

- 1 **POWER** turns both the television and the EXP device on and off
- 2 **VOLUME AND MUTE** Controls the TV audio
- 3 The **TIVO** button takes you to the Home screen
- 4 When navigating the EXP menus, press **UP, DOWN, LEFT or RIGHT** to move around, and press the center button (OK) to choose menu items. While watching video, press OK to bring up the Info banner; press it again to pause. Use **LEFT** and **RIGHT** to access Restart, Rewind, Replay, Forward, and Advance. In live TV, press **UP** for the mini guide or **DOWN** to see the Info banner
- 5 **BACK** starts full-screen video on the Home screen, and goes back to the previous screen on other menu screens
- 6 Press **VOD** to go directly to the video on demand library



Visit [OneWire.Help/Stream](https://www.armstrong.com/OneWire.Help/Stream) for more information and troubleshooting

REMOTE CONTROL ESSENTIALS

PAIRING

To control your EXP box with your voice, you must use an EXP voice remote that is paired correctly with your EXP box. Usually, the remote is paired when you insert the batteries, but if you are having trouble using voice commands, you may need to re-pair it.

1. TiVo Menu/Settings/Remote Settings. Pair your remote with your box.
2. Press and hold the TiVo button  and BACK button  simultaneously until the activity light at the stop of the remote illuminates.
3. Release the buttons. The activity light will flash slowly, then flash quickly five times.

VOICE COMMANDS

To issue a voice command, press and release the Google Assistant® button  and speak naturally into the remote. You'll see results from Google®, with additional results from the EXP service.

Here are some things you can do with voice:

- Search or browse: Say "Find Modern Family" or "Show me some action movies."
HINT: Add on to your initial command to get more specific. For example, after the command, "Show me some action movies," you could add "Just the ones with Bruce Willis."
- Launch an app: Say "Launch Netflix."
- Go to a TiVo menu screen: Say "Take me home" or "Show me the Guide."

TIPS & TRICKS

Press the TiVo button  once to go to the Home screen.

While watching live TV or a recorded show, use your remote to bring up QuickView panels. UP shows you a mini guide; DOWN displays the Info Bar and Home menu.

Channel Up/Down does more than change the channel!
It also pages up or down through lists of shows or menu items.

TalkBack is a voice guidance feature available free to EXP customers. It speaks the text on your screen making navigation of on-screen services and functions easier for customers with visual disabilities. Press TiVo/Settings/Device Settings/Device Preferences/Accessibility/TalkBack = On or Off

USING THE VOICE REMOTE CONTROL

With EXP's voice remote capabilities, you can find shows, sports, and movies by simply telling EXP what it is you want to watch. To start your search, just press and release the Google Assistant button  and speak into your voice remote. EXP does the rest. With voice remote, you can also change channels, launch apps and navigate the User Interface.

SEARCH Just say it, and EXP finds it. You watch it!

USER INTERFACE

| | |
|---|--|
| Launch screens <i>"Guide" "Home"</i> | Opens the screen with just your voice command. |
| Launch Apps <i>"Launch Netflix"</i> | Launches the corresponding app. |

SIMPLIFIED NAVIGATION

You never need to know what number a channel is, how to get to certain screens, or how to find content to play or record. With one command, you can accomplish any of this from any screen, bypassing many clicks, screens, and potential frustration!

| | |
|--|---|
| Station title search <i>"Watch FX"</i> <i>"HGTV"</i> | Even though there are hundreds of channels in most lineups and multiple versions of every channel, you don't need to scroll through screen after screen to tune to the right station. |
| Voice activated scrolling <i>"Show me movies on tonight"</i> | When many results are available, you aren't limited to a single screen. This makes it very simple for you to navigate without requiring a wake-up word. |
| Rewind or fast forward <i>"Fast forward 1 minute"</i> <i>"Rewind 10 seconds"</i> | Rewind or fast forward by saying a specific amount of time. |

CONTEXT AWARENESS

You can say something inaccurate but still receive the right response!

| | |
|--|--|
| Speech to text error correction <i>"Tom Thanks" (auto correct to Tom Hanks)</i> | Corrects misspellings that might come through from the Automated Speech Recognition service, auto-correcting to your most likely intent. |
|--|--|