

RIGHT SIDE BUTTONS
LEFT SIDE BUTTONS ON FRONT


- 14 **LIVE TV** Watch live TV
- 15 **INFO** Press to bring up the full Info banner while watching a show. Opens an Info card when pressed on a program on the guide or menus. Hold to access Accessibility options at the bottom of the screen
- 16 **OK/SELECT** Choose menu items. When watching Live TV, press to bring up the Trick Play menu
- 17 **EXIT** Close apps or menus
- 18 **ARROWS** Use these buttons to navigate the TiVo menus. In live TV, press **UP** for the one-line guide, **DOWN** to see full info banner, **LEFT** for Trick Play menu, and **RIGHT** for Trick Play menu
- 19 **CHANNEL UP/DOWN** Change the channel and page up or down while in the program guide or TiVo menus
- 20 **RECORD** Starts recording the show you're watching, or sets up a recording for a show selected in the program guide
- 21 **FAST-FORWARD** Fast-forwards through a show. Press up to three times for three speeds
- 22 **PAUSE** Freezes a show. Press again to resume playing
- 23 **ADVANCE** Moves forward in 30-second increments. Shift the grid guide 24 hours ahead.
- 24 **ON DEMAND** Takes you to the main screen for video-on-demand options
- 25 **NETFLIX** Quick one-click access to Netflix
- 26 **ENTER/LAST** Returns to last channel viewed in Live TV



Need help? Scan the code
Visit OneWire.Help/Stream
Call 1.877.277.5711

LEFT SIDE BUTTONS
RIGHT SIDE BUTTONS ON BACK

- 1 **TIVO HOME** Takes you to the TiVo Home® screen, the starting point for all TiVo features and settings
- 2 **TV PWR** Once programmed, turns your TV on or off
- 3 **INPUT** Selects the input your TV displays (such as DVD player, game system)
- 4 **BACK** Goes back to the previous screen in menus and goes to full-screen video from the Home screen
- 5 **VOLUME AND MUTE** Once programmed, controls the volume on your TV or AV receiver
- 6 **GOOGLE ASSISTANT** Press and release to use Google Assistant for Voice Search
- 7 **GUIDE** Takes you to the program guide, where you can find shows to watch or record
- 8 **PLAY** Resumes playing a paused program. Starts playing the highlighted program in My Shows
- 9 **REWIND** Rewinds a show. Press up to three times for three speeds
- 10 **STOP** Stops Playback and returns to previous UI Screen.
- 11 **REPLAY** Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show
- 12 **A, B, C, D** Sort and filter views. Hold to turn on/off Screen Reader (A), Closed Captions (B), or SAP (C). Trigger Start Over for current program (D), if applicable. Look for on-screen tips for further uses
- 13 **CLEAR** Removes display of info banner or program guide and deletes titles from My Shows or To Do list

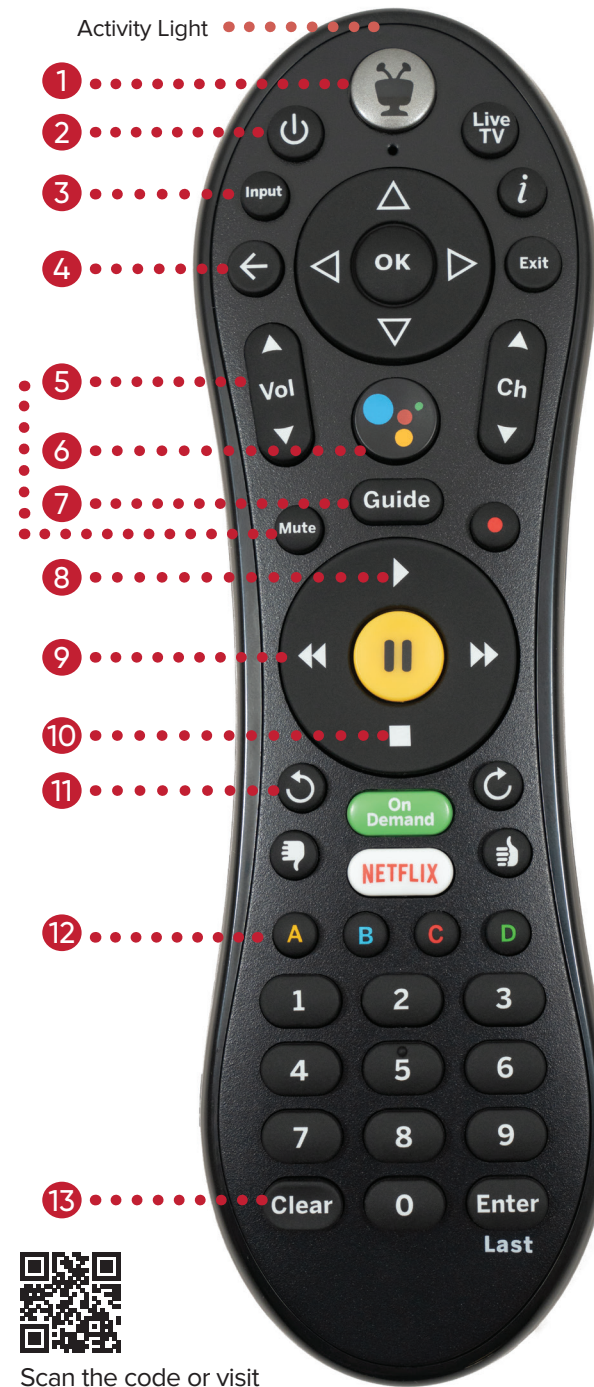





Scan the code or visit
OneWire.Help/Stream
for more information and troubleshooting

REMOTE CONTROL ESSENTIALS



PAIRING

To control your Armstrong TV box, you must first pair your Armstrong TV remote with it. Only one remote can be paired to the box at a time. The remote will go into pairing mode when you insert the batteries, this will be indicated by a flashing light after a button press. If your remote stops communicating with your Armstrong TV box, it may need to be paired again. If you receive a replacement remote in the future, it will also need to be initially paired. Instructions for pairing the remote are as follows.

1. Press the TiVo button  > Menu() > Settings > Remote Settings > Pair your remote with your box. If you are not able to navigate on the screen, skip to Step 2.
2. Press and hold the TiVo button  and BACK button  simultaneously until the activity light at the top of the remote goes solid.
3. Release the buttons. The activity light will flash amber. If pairing is successful, the light should flash quickly five times.

PROGRAM THE REMOTE TO YOUR TV

If your remote does not automatically program with your TV, to control volume and power controls, you may need to set it up manually.

1. Press the TiVo button  > Menu() > Settings > Remote Settings > Remote Control Programming > Change TV Setup and select Setup TV now.
2. The TV will show "Scanning for Devices". If the remote is able to detect your TV automatically, it will ask you to test the volume and power controls. If these work, select Finish. If they do not, select Change TV. Find your brand of TV on the list or select Other to type it in. Follow the onscreen instructions catered to your brand of TV.

HINT: *If you have a separate device for Audio, you may need to toggle Change Volume Control from the Remote Control Programming menu to switch which device your remote adjusts your volume through. Change Audio Setup will allow you to manually program to an external audio device.*

TIPS & TRICKS

Press the TiVo button  once to go to the Home screen.


While watching live TV or a recorded show, use your remote to bring up QuickView panels. **UP** shows you a mini guide; **DOWN** displays the Info bar.

Channel **UP** and **DOWN** does more than change the channel! It also pages up or down through lists of items and the guide.


Multiple Accessibility options are available free to Armstrong TV customers.

Screen Reader speaks the text on your screen, making navigation of on-screen services and functions easier for customers with visual disabilities.

Closed Captioning and *Secondary Audio Programming* are also available.

To access these features, press and hold the  button on Live TV. Press **OK** on the desired option to toggle it On or Off.

USING THE VOICE REMOTE CONTROL

With Armstrong TV's voice remote capabilities, you can find shows, sports, and movies by simply telling Armstrong TV what it is you want to watch. To start your search, just press and release the Google Assistant button  and speak into your voice remote. Armstrong TV does the rest. With voice remote, you can also change channels, launch apps and navigate the User Interface.

SEARCH Just say it, and Armstrong TV finds it. You watch it!

USER INTERFACE

Launch screens <i>"Guide" "Home"</i>	Opens the screen with just your voice command.
Launch Apps <i>"Launch Netflix"</i>	Launches the corresponding app.

SIMPLIFIED NAVIGATION

You never need to know what number a channel is, how to get to certain screens, or how to find content to play or record. With one command, you can accomplish any of this from any screen, bypassing many clicks, screens, and potential frustration!

Station title search <i>"Watch FX"</i> <i>"HGTV"</i>	Even though there are hundreds of channels in most lineups and multiple versions of every channel, you don't need to scroll through screen after screen to tune to the right station.
Voice activated scrolling <i>"Show me movies on tonight"</i>	When many results are available, you aren't limited to a single screen. This makes it very simple for you to navigate without requiring a wake-up word.
Rewind or fast forward <i>"Fast forward 1 minute"</i> <i>"Rewind 10 seconds"</i>	Rewind or fast forward by saying a specific amount of time.

WANT TO PRINT YOUR CHANNEL GUIDE?

Visit ArmstrongOneWire.com/television/channelguide

ADDITIONAL ASSISTANCE

Press 888 from Live TV to access Armstrong Answers instructional videos.



For additional assistance:
Scan the code
Visit onewire.help/stream
Call 1.877.277.5711

ARMSTRONG[®]